

一站式加固计算机品牌 YOUR ONE-STOP RUGGED COMPUTING SOLUTION

用户手册

ONERU99ed

维修记录

ONERU99ed

PRODUCT NAME:

PRODUCT MODEL

NAME OF CLIENT:

DATE OF PURCHASE

DATE IN

SERVICE

WARRANTY CARD

MAINTENANC

PERFORMED E

Maintenance record list

FQUIPMENT

ONERU99ed

1.如下情况属干保修范围,可免费维修;

(2) 在质保期内, 非人为损坏, 免费维修。

(1) 退换货、送修途中由于运输、装卸所导致的损坏。

(4) 未按使用说明书要求安装、使用、维护、保管导致的产品故障或损坏。

(8) 由于不可抗因素(如火灾、地震、水灾等)而造成的故障或损坏。

(2) 任何未经授权许可的改装、拆卸、维修。

(5) 保修凭证与产品型号不符或保修凭证被涂改。

私、但不承担维修过程中个人数据损坏、丢失的责任。

(7) 已经超出保修期限。

测无故障产品,将原样退回。

3.凭保修卡保修。

ONERU99ed

ONERUgged

ONERUgged

第一次开机时必须连接 AC 电源。

·N15T加固笔记本·电源线·电源适配器

After unpacking, you should see the following standard items:

EOUIPMENT FORM: Rugged Notebook

Post code: 518122

L Telephone: 400-830-4882



- 2.(1) From the purchase date, 12 months warranty period supply for machine power adapter and data cable (1) 机器质保期为12个月、电源适配器、电脑数据线质保期为12个月。 (2)In the case of any malfunction/ breakage/damage that occurs under normal conditions (Non-human
 - damage) within the warranty period, repair will be performed by free
- (3) The warranty covers problems with the product under normal use. Note: cosmetic issues are not covere (3) 质保范围是指产品在正常使用下出现问题。 备注: 外观问题不属于保修范围。
- 2.如下情形非保修范围,如需提供维修服务,可酌情收取物料及服务费用: 2. The following conditions are not covered under the terms of the warranty. If maintenance services are
 - required, material and service fees may be charged as appropriate:
 - (1) Damage caused by transportation, loading and unloading during return, exchange, and repair. (2) Any unauthorized modification, disassembly and repair.
- (3) Damage caused by accidental factors or human actions. Such as: liquid ingress, drop (3) 意外因素或人为行为导致产品损坏。如:进液、摔损、输入不合适电压、过度挤压、主板变形等。对于 damage, input inappropriate voltage, excessive extrusion, motherboard deformation, etc. For the power 电源适配器,若有明显的硬物损伤、裂痕、断脚、严重变形,电线破损、断线、裸芯等现象。
 - broken wires, bare cores, etc.
 - (4) Product damage caused by failure to install, use, maintain, and store in accordance with the user
- (6) 产品铭牌、SN条码、防拆标签被撕掉或被损坏,模糊不清无法识别。 (5) The warranty certificate does not match the product model or has been altered.

 - blurred and unrecognizable.
 - (7) The product is out of warranty

Repair Service Guide

(1) Before sending for repair, please back up your personal data in advance. Your personal data may be (1) 送修前,请您提前备份个人数据。维修过程中可能会造成您个人数据的丢失,我们会保护您的个人隐 lost during the maintenance process. We will protect your personal privacy, but we will not be responsible for the damage or loss of personal data during the maintenance process.

1. The following are covered by the warranty and can be repaired free of charge:

adapter, if there are obvious hard object damage, cracks, broken feet, severe deformation, damaged wires

(6) The product nameplate, SN barcode, and tamper-proof label are torn off or damaged, making them

(8) Failure or damage caused by irresistible factors (such as fire, earthquake, flood, etc.).

- (2) When sending for repair, the product must be professionally inspected by an authorized service (2) 送修时,产品须经过授权服务中心专业的检测。确认故障后,服务中心会确定相应的维修方案。对于检
- (3) If a fee is charged because the product does not meet the warranty conditions, (3) 因产品不符合保修条件需收取费用的,授权服务中心将向消费者收取维修费。

Address: Room 401, Building C. Chaoije Industrial Park, No. 1 Guanghui Road

Jinsha Community, Kengzi Street, Pingshan District, Shenzhen China

Shenzhen Emdoor Information Co., Ltd.

准备开始/READY TO START

本章首先教导您如何将设备准备好,以便让您开始工作。接着概略地介绍设备的外观和组件。

ONERUgged

This chapter first tells you step by step how to get the computer up and running. Then, you will find a section briefly introducing the external components of the computer.

开箱检查/OPEN BOX TO CHECK

打开包装后,您应该会看到下列标准项目:

· N15T Rugged Notebook Terminal · Power Cord · Power Adapter

Mail: support@onerugged.com

DEVICE MODEL: N15T

连接电源/CONNECT THE POWER SUPPLY

注意: 仅限使用本产品随附的电源活配器。使用其他电源活配器可能会损坏您的设备。

Note: Use only the power adapter provided with this product. Using other power adapters may damage your

It must be connected to the AC power supply when it is turned on for the first time.



- 1 申源活配器的 DC头 插 A 设备的DC口内。
- 2.将电源线的母端口端插入电源适配器,公端口端插入电源插座。
- 3.电源插座通过适配器为设备供电。现在您可以打开设备电源。
- Insert the DC head of the power adapter into the DC port of the device.
- 2. Plug the female end of the power cord into the power adapter and the male end into the power outlet.
- 3. The power outlet supplies power to the device through an adapter. Now you can power on the device.

备开机和关机/TURNING ON AND OFF THE DEVICE

开机/START UP

1 按下电源钮() 开机。操作系统Windows 将启动。

1. Press the power button $\boldsymbol{\circlearrowleft}$. The operating system Windows will start.





深圳市亿道信息股份有限公司

☑ 邮箱:support@onerugged.com

♥ 地址:深圳市坪山区坑梓街道金沙社区光辉路1号超捷工业园厂房C栋401

▶ 电话:400-830-4882

邮编:518122

设备形态:加固笔记本

*本页内容不得擅自涂改,并请保存产品包装盒,以维护您的合法权

center. After confirming the fault, the service center will determine the corresponding maintenance plan. For detected non-faulty products, it will be returned as is.

the authorized service center will charge the consumer for maintenance.

 $\overline{}$

关机/SHUTDOWN

在完成工作之后,您可以关闭电源或者让设备进入睡眠或休眠状态:


When you 're work done, you can power it off or leaving it in Sleep or Hibernation mode:

要/TO	要/TO 方法/DO THIS		
关闭电源 (shut down)	单机 毗 →[也 电源]→[关机]/Click 믧 →[也 Power]→[Shutdown]		
重启 (reboot)	单机 믧 →[也 电源]→[重启]/Click 믧 →[也 Power]→[Reboot]		
休眠 (Turn off or wake up the screen)	在默认状态下,此项并不会出现在 (电源) 菜单里。 如果您想要使用此功能,请到 Windows 的设置处进行设置。 / This item does not appear in the power menu by default. If you want to set up this mode, please go to Windows Settings to set it up.		


设备外观介绍/EQUIPMENT APPEARANCE INTRODUCTION

注: 1.依照所购买的型号不同,设备外观可能和本手册所显示的结构有所不同。

Note: 1. Depending on the special model you purchased, the look of the device may be different from the the graphics shown in this manual.

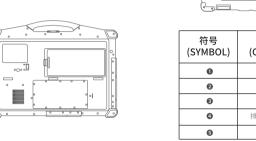

正面和背面组件/FRONT AND BACK COMPONENTS

 

组件 PONENTS)	况明 (DESCRIPTION)			
ogo pin	pin USB定义的拓展接口/USB defined expansion interface		符号	
/Battery lock	锁住电池/Lock and protection battery		(SYMBOL)	(CC
览/SSD Lock	锁住插入的硬盘/Locking the inserted SSD		0	RS232
rainage outlet	便于导出键盘上的积水/For exporting water from the keyboard		0	耳机接
ZI /Air Inlat	C 掛井刀 和企業計算 800-1000000 b - 10-10 b - 10-10 d - 10-10-10 b - 10-10 b - 10-1			

左侧组件/LEFT-SIDE COMPONENTS



顶部组件/TOP COMPONENTS 说明


сом 6 •4 594 @ •40



PTION)		0 2 8 0 6				
ined expansion interface		符号 (SYMBOL)	组件 (COMPONENTS)	说明 (DESCRIPTION)		
g the inserted SSD		0	RS232接口/RS232 interface	给平板散热使用(出风口)/Used for radiating the flat plate (air outlet)		
ng water from the keyboard		0	耳机接口/Earphone interface	可使用3.5毫米音频线连接音箱播放音频文件 /3.5mm standard earphone audio output Interface		
and the second second	I	80	USB3.0*3/USB2.0*1	USB数据高速传输接口,可连接USB存储设备及 即插即用USB设备 /USB data transmission interface, connect USB storage devices and plug and play USB devices		

HDMI接口/HDMI

 ● 散热风扇/Cooling Fan 给平板散热使用(出风口)/Used for radiating the flat plate (air outlet)



用干发散执量/Used to dissipate heat



平板散热使用(出风口)/Used for radiating the flat plate (air outlet)					•	电标相小灯/Power Indicator	/The LED will light on when pressing
可使用3.5毫米音频线连接音箱播放音频文件		TOM COMPONENTS			•	充电指示灯/Indicator Light	当设备连接话配器充电时会不断 /The indicator can view the charging status of always flashes while chargin
/3.5mm standard earphone audio output Interface	底部组件/BOTTOM COMPONENTS				0	硬盘指示灯/Uppercase indicator Light	当系统对硬盘做读写操作时,该指 /When pressing the shift key, the
USB数据高速传输接口,可连接USB存储设备及 即插即用USB设备	•				6	大写锁定指示灯/HDD LED	但键盘打开大写锁定时,该指示 When reading HDD, the LED
USB data transmission interface, connect USB storage devices and plug and play USB devices					6	3G/4G指示灯 / 3G/4G LED	The 3G/4G is turned on to be blue, and the light off
在此插入SD卡可扩展存储空间/Expand storage space					0	P键/P key	一键熄屏或打开 /One-touch screen off or
连接电源后给设备电池充电 /Charge the device after connecting the power	符号组件		说明		8	电源键/Power key	短按可休眠唤醒系统,长按3~5秒开机,长抄 /Press it to turn your notebook on or off. Pr turn on. Press with 10 second s to turn off. time, for sleep mode or aw
	(SYMBOL)	(COMPONENTS)	(DESCRIPTION)	[9	鼠标触摸板/Mouse touchpad	用作鼠标操作/Touch the area to ope

其他组件/OTHER COMPONENTS

6 • • • • • • • •


● 前置摄像头/Front camera

将电池取下,在此位置取下卡座、插入Sim卡。 将SIM卡放入指定位置后重新插回即可使用,如下图

TF卡、SIM 卡安装

Remove the battery and the card holder, then insert a TF card and Nano Sim card.

Put the TF card and Nano SIM card back to their right positions as shown in the figure below, then to use.

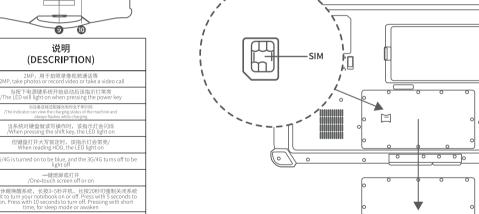

电源适配器/POWER ADAPTER

电源适配器仅供您的设备使用。若挪作其它用途将可能损坏接上的电器或者适配器。 · 电源适配器所附的电源线为符合购买地的规格。若要在国外使用此设备,请咨询经销商取得合适的电源线。

·若欲拔开电源适配器时,必须先拔掉墙壁上的电源插头,再拔掉插在手持机上的电源接头,否则会使设备及 适配器受到外部电压冲击而受损。

·拔掉插头时,请垂直 90° 插拔,切勿拉扯电线,应用手握着插头拔出。

·The power adapter is for your device only. If it is used for other purposes, it may damage the connected electrical appliances or adapters.

·The power cord attached to the power adapter must meet the specifications of the place of purchase. To use this device abroad, consult your dealer for a suitable power cord.

· If you want to unplug the power adapter, you must unplug the power plug on the wall first, and then unplug the power connector plugged into the handset, otherwise the device and adapter will be damaged by external voltage impact.

·When unplugging the plug, please plug in 90° vertically, do not pull the wire, and pull out the plug with

your hand.

中干您的设备是以直流电运作,但是电源插座通常是提供交流电源,因此电源适配器的作用就是将供电来源的 交流电转换为设备所需的直流电。在连接电源适配器的同时,亦自动为电池充电。适配器输入可在100V至240V

AC的电压范围内运作,输出为19V。 Since your device runs on DC power, but the power outlet usually provides AC power, the job of the power

battery is also automatically charged when the power adapter is connected. The adapter input operates

设备问题可以是硬件、软件、或两者共同引起的。当您遭遇问题时,它可能只是一个一般性问题,能够轻易就

adapter is to convert the AC power from the power source to the DC power required by the device. The · Make sure the settings in the BIOS are completely

correct and firm.

assistance.

Make sure that all the device drivers are correctly installed.

·试着找出问题的来源和类别。

· 确定 BIOS中的设置完全正确

·确定所有驱动程序已安装完成。

您所提供的信息是越详尽越好。

solve the problem at this stage:

Equipment problems can be caused by hardware, software, or both. When you have a problem, When you

Make notes of your observations. Does any message appear on the screen? What is the status of the

·Try to identify the source and category of the problem.

indicators light? Detailed descriptions are useful to the service personnel when you need to consult one for

Equipment problems can be caused by hardware, software, or both, When you have a problem, When you

·细观察实际的状况。屏幕上是否出现任何信息?指示灯的亮灯情形为何?当您必须寻求维修人员的帮忙时,

When you encounter a problem, you may wish to do the following preliminary checks first, maybe you can

· Make sure you have turned on the power of the peripheral device before turning on the device.

If there is a problem with the external equipment, please confirm whether the connection of all lines is

encounter any problem, it might be a typical problem that can easily be solved.

初步检查要项/PRELIMINARY CHECKLIST

确定您在设备开机之前已开启外设设备的电源。

当您遇到问题时,不妨先做下列的初步检查,也许在此阶段即可解决问题;

·如果外接的设备出现问题,请确认所有线路的连接是否正确而且牢固。

如果按照本章中的说明进行操作后问题仍然存在,请与授权经销商联系以寻求帮助。

This chapter tells you what actions to take when solving common computer problems

If any problem persists after you follow the instructions in this chapter, contact an authorized dealer for

故障排除/TROUBLESHOOTING

本章告诉您在面临一般性问题时,该尝试甚么方法来解决。

from 100V to 240V AC and the output is 19V.